 






Please install the fixture onto a sufficiently strong, load bearing surface.

If this product is being installed outdoors, or a location where the product will be exposed to high levels of moisture, it is suggested that you should apply a silicone seal around the back-plate/canopy. (Not supplied)

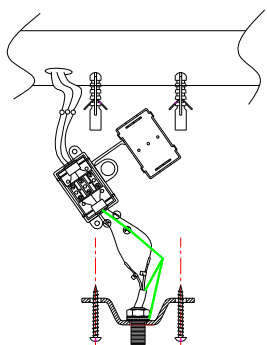

ASSEMBLY STEPS:

1. D → A, E
2. D → E, F
3. B → A
4. C → A

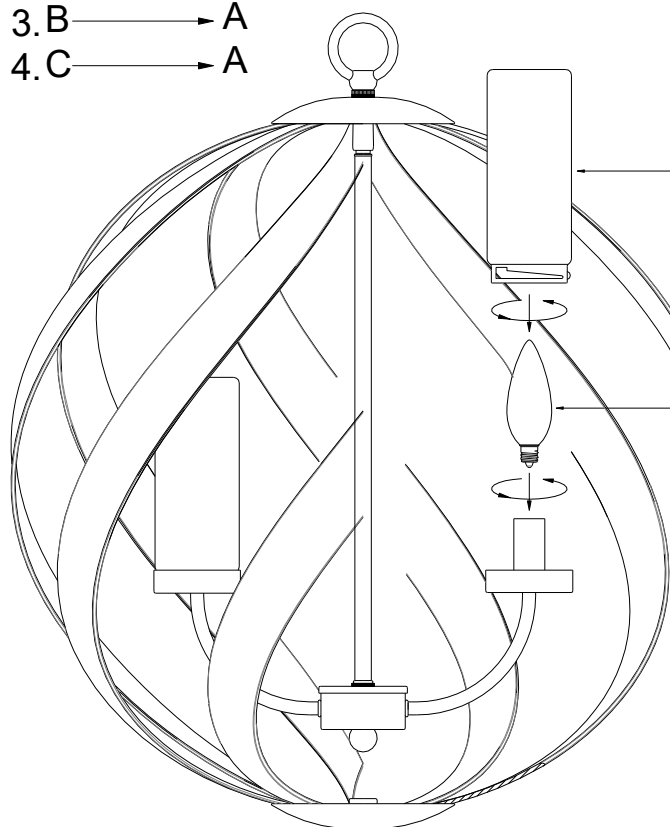




C

4 x MAX 40W E14
NOT SUPPLIED

B

A

See final page for
wiring instructions.

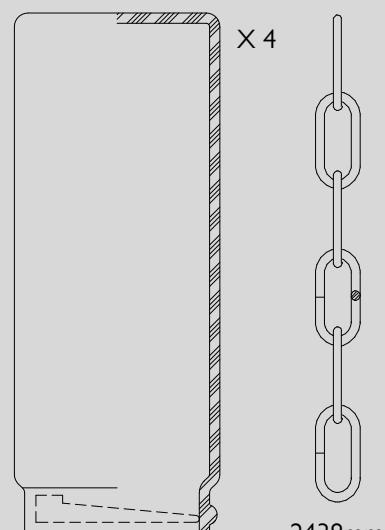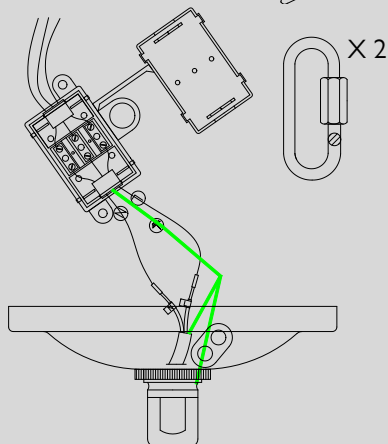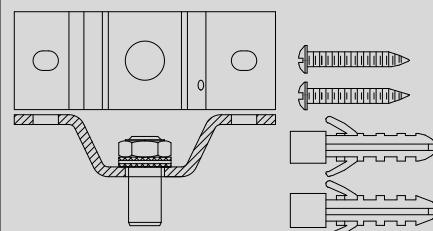

2438mm
Chain

